



Samsung NX30 Screen Replacement

Replace a cracked or broken screen.

Written By: Julia Kilcup



INTRODUCTION

The replacement of your screen takes a little work. With the right equipment though it is not too difficult to do. Just be ready to unscrew a lot of screws.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)



PARTS:

- [11 Phillips head screws 4mm long](#) (1)

Step 1 — Battery



- Flip the camera over so that the bottom of the camera is up.
- Push the battery switch towards the back of the camera.

Step 2



- Locate the blue switch above the battery pack.
- Slide the blue switch into the camera in the direction of the arrow on the switch. When the switch has been pushed in the battery will spring up.

Step 3




- Pull the battery out.

Step 4 — Screen




- Unscrew the nine 4mm Phillips head screws surrounding the body of the camera. They are located on the bottom of the camera and both sides of the camera.

Step 5

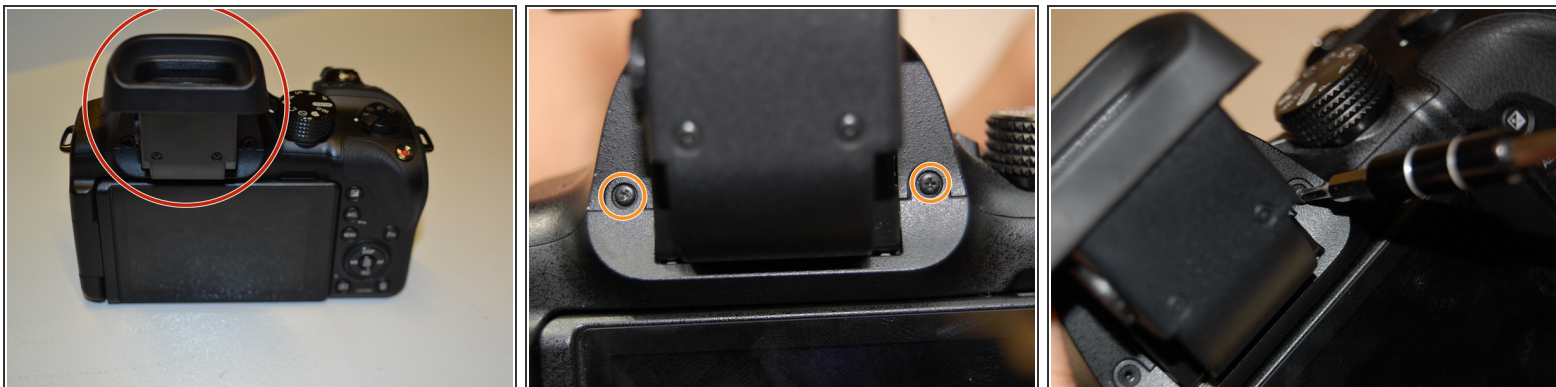

- Pull the viewer out from the camera and then up.
- Unscrew the two black 4mm Phillips head screws under it.



Step 6

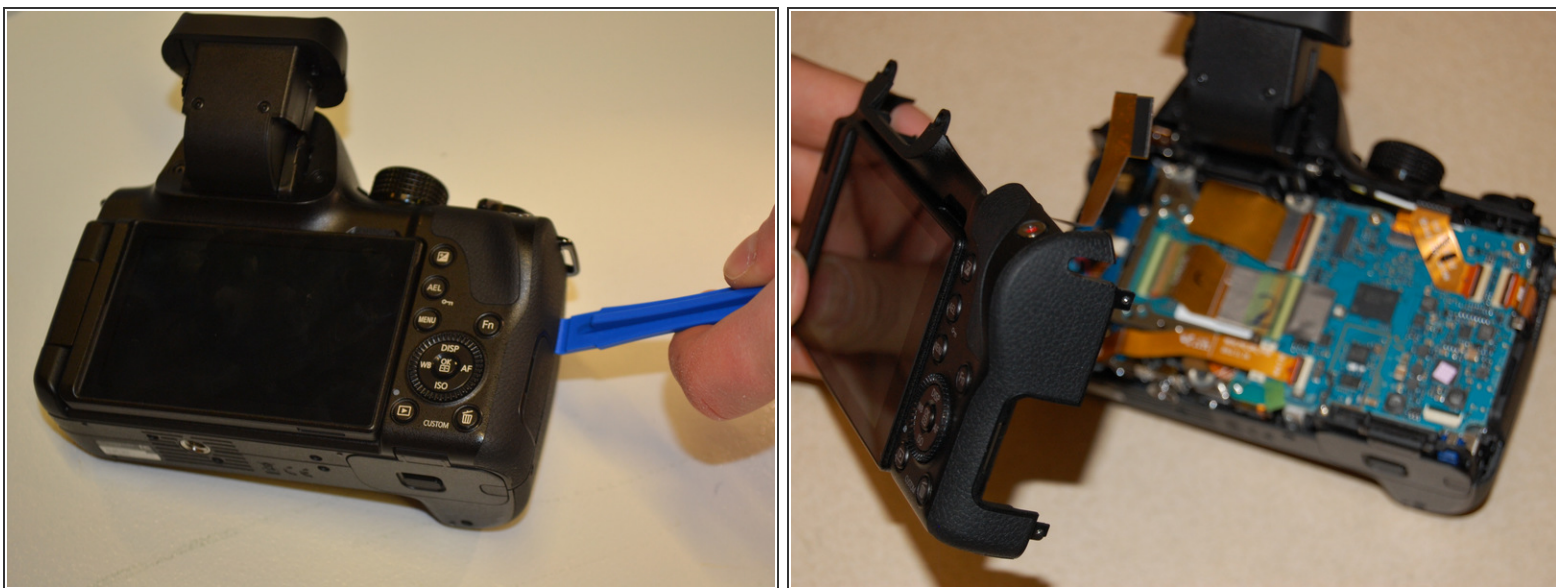

- Once the screws are all removed, place the camera face down, with the screen facing up.
- Pry open the body using the plastic opening tool.

⚠ Gently open the body.

Step 7

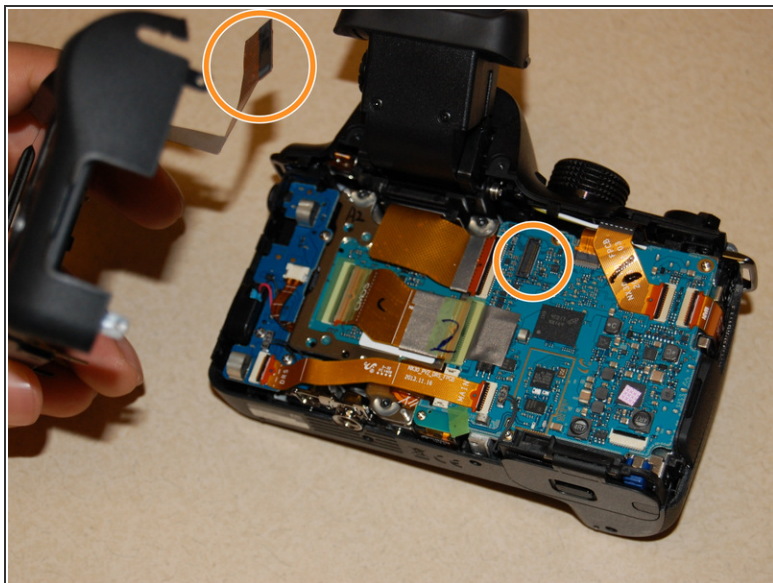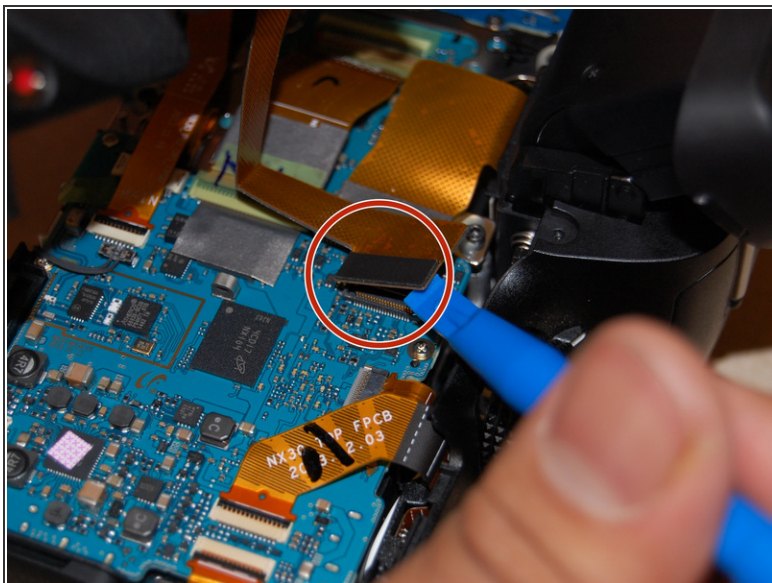

- Then use the plastic opening tool to dislodge the Ribbon Cable, located near the top of the camera, from the Circuit Board.
- The Ribbon Cable will be disconnected from the Circuit Board when you are done.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 12:01:41 PM.